

ONE (1) YEAR LIMITED WARRANTY TERMS AND CONDITIONS

This warranty applies to repair or replacement if a product is found to be defective in material or workmanship. This warranty does not apply to any damage resulting from commercial, abusive and/or unreasonable use or supplemental damage. Defects as a result of normal wear and tear will not be considered manufacturing defects under this warranty. Read the instruction manual before attempting to use this product. WindChaser® Products, Inc. is not liable for incidental or consequential damages of any nature. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from state to state. This warranty applies only to the original purchaser of this product. WindChaser® Products, Inc. will repair or replace this product if it is found to be defective in material and/or workmanship. Defective product should be returned to the place of purchase in accordance with store policy. Thereafter, while within the warranty period, any defective product should be returned to WindChaser® Products, Inc. This warranty does not cover damage resulting from unauthorized attempts to repair or from any use not in accordance with its manual. Return defective product to WindChaser® Products, Inc., 1842 Washington Way, Suite C, Venice, CA 90291, freight prepaid with proof of purchase and \$15 for handling, return packing and shipping charges. Due to minor changes in design or otherwise, the product you buy may sometimes differ slightly from illustration.

 
This warranty is valid only in the United States and Canada.

WindChaser® Products, Inc.
1842 Washington Way, Suite C
Venice, CA 90291
(800) 405-2943, 310-827-8615
Fax 310-827-8566

E-Mail: customerservice@windchaserproducts.com



OPERATING INSTRUCTIONS FOR WINDCOLUMN™ FAN

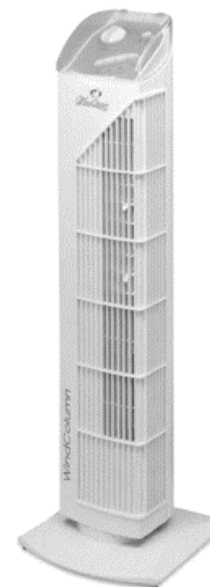

**CAREFULLY READ INSTRUCTIONS
FOR SAFE OPERATION**

MODEL WCF1 / WCF2

READ AND SAVE THESE INSTRUCTIONS

 
When using electrical appliances basic safety precautions should always be followed including the following:

1. Use fan only as described in this manual. Other uses not recommended may cause fire, electric shock or injury.
2. This product is intended for household use only and not for commercial or industrial use.
3. To protect against electrical shock, do not immerse unit, plug or cord in water or spray with liquids.
4. Close supervision is necessary when any appliance is used near children.
5. Unplug fan from outlet when not in use, when moving fan from one location to another or before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosives and/or flammable fumes.
8. Do not place fan or any parts near an open flame, cooking or heating appliance.
9. Do not operate fan with a damaged cord, plug or after the fan malfunctions or has been dropped or damaged in any manner.
10. Do not use outdoors.
11. Do not let cord hang over the edge of a table or counter, or let it touch hot surfaces.
12. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
13. Always use on a dry, level surface.
14. Do not hang or mount fan on a wall or ceiling.
15. Do not operate without fan grills properly in place.
16. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THESE IMPORTANT SAFETY INSTRUCTIONS



WARNING: To Reduce The Risk Of Fire Or Electrical Shock And Injury To Persons, Do Not Use In A Window.
WARNING: Do Not Use This Fan With Any Solid State Speed Control Device.

PARTS

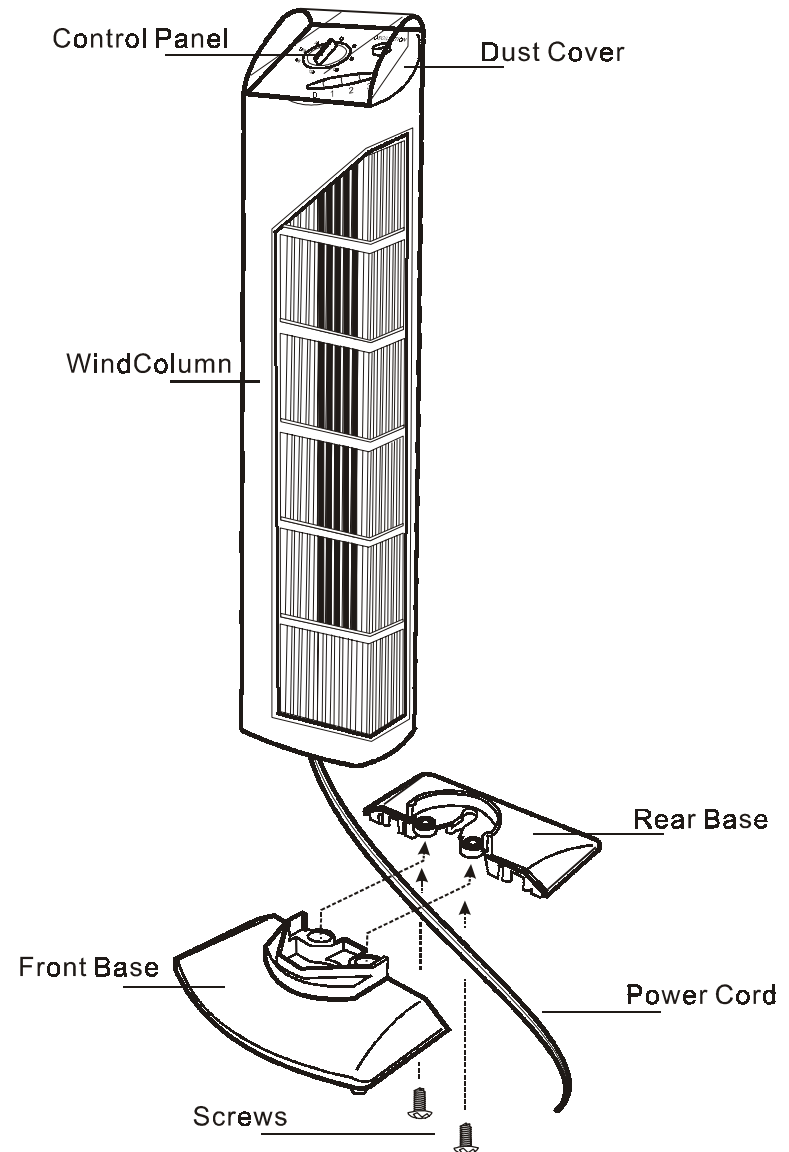

ASSEMBLY INSTRUCTIONS

  Assemble the fan before plugging it in.

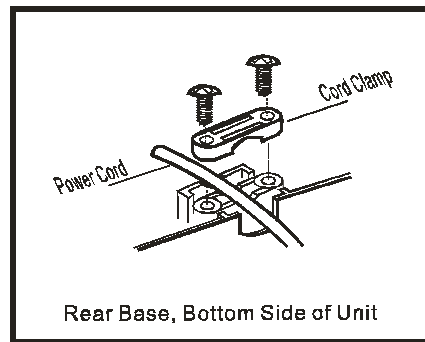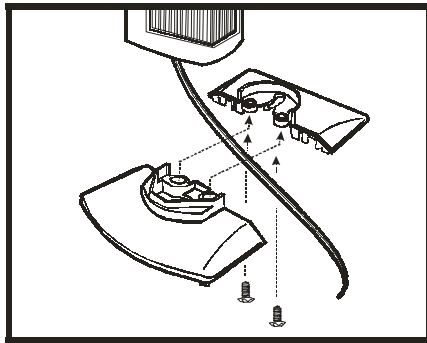

1. Pass the power cord through the center notch of the rear base.
2. Connect the rear base to the front base by sliding it downwards.
3. Install the WindColumn into the base assembly, and secure with the two supplied screws.
4. Loosen the cord clamp under the base assembly. Place the power cord under the cord clamp and secure it with the clamp and screws.

IMPORTANT INFORMATION

THIS FAN IS NOT TO BE USED IN THE BATHROOM. Place the fan on the ground close to an electrical outlet. Be sure the location is level so that the fan is stable.

 
Place the fan out of the reach of children. Do not insert anything into the grill. If moving the fan to a different location, switch it off and unplug it from the socket.

CAUTION: The fan should not be used without a base, nor used lying on its side.

OPERATING INSTRUCTIONS

1. Set your fan on a level and dry surface.
2. Plug the power cord into a standard 120volt AC wall outlet.

Control Panel

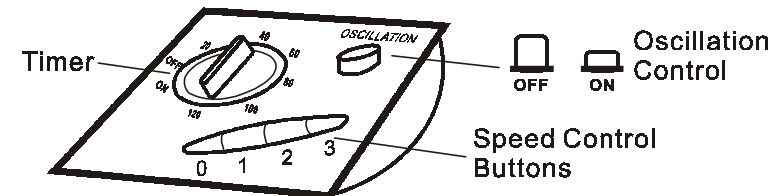

3. OPERATION: To operate the fan, turn the timer dial to "ON" and push one of the speed control buttons. The speed control buttons correspond to the fan speed as follows:
0 = OFF, 1=LOW, 2=MED, 3=HIGH
Please note that if you want to use the fan without the timer, the timer switch must be turned to "ON" in order for the fan to operate.
4. TIMER: The fan has a timer that can be set for a maximum of 120 minutes. The fan will automatically shut off after the selected time period has elapsed. To set the timer, turn the timer switch clockwise to your desired run time.
5. OSCILLATION: The WindColumn can be used with or without the oscillation function. Push the button down to activate the oscillation feature and push the button again to deactivate the oscillation function.

CARE AND STORAGE

1. BE SURE THE ELECTRICAL PLUG IS REMOVED FROM THE ELECTRICAL SOCKET BEFORE ATTEMPTING ANY CLEANING OR MAINTENANCE.
2. Use only a soft moistened cloth with a soap solution to clean your fan.
3. Do not immerse the fan in water and never allow water to drip inside the fan.
4. Do not use gasoline thinners or other chemicals to clean the fan.
5. For storage, clean fan carefully as instructed and store in its original box. Store the fan in a clean, dry place.

ELECTRICAL RATINGS

1. This product has been rated at 120VAC 60Hz 44W MAX
2. If you experience a problem see a qualified technician for service and repair.

TROUBLESHOOTING

Problem	Remedy
No Power	Make sure unit is plugged into a live socket.
The cable clamp is missing	The cable clamp and its screws are located under the rear base, note the picture in the assembly instructions section of this manual.
Fan wobbles when touched	The WindColumn is designed to oscillate from side to side; therefore, it will pivot on the oscillation mechanism when touched. However, the fan should not wobble when it is operating and not being touched. If the WindColumn wobbles when it is operating and not being touched, check that it is properly secured to the base and make sure that it is placed on a level surface.

CAUTION

There are no consumer serviceable parts inside this fan. If you experience a problem, please see warranty for information. Please do not attempt to service the fan; doing so will void your warranty and could cause damage and personal injury.

